



Connecting to DCE/DTE (after Ver3.0)

1. Connecting to DCE

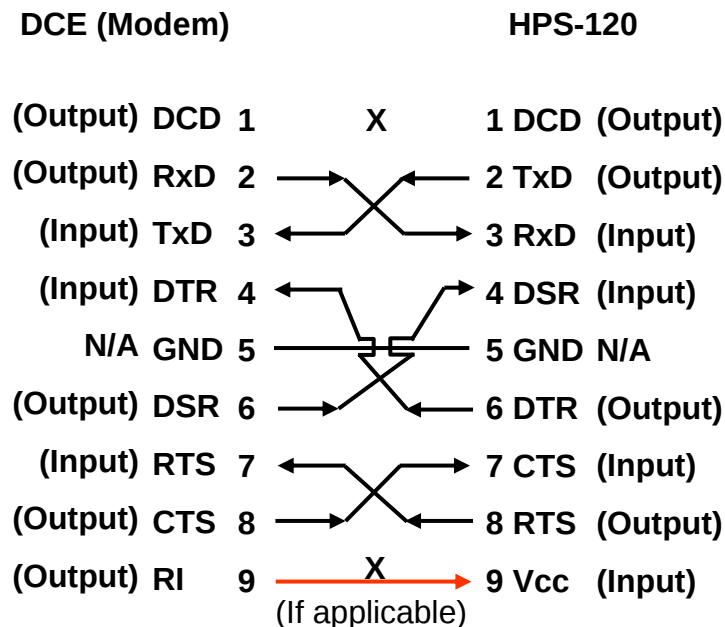

2. Connecting to DTE

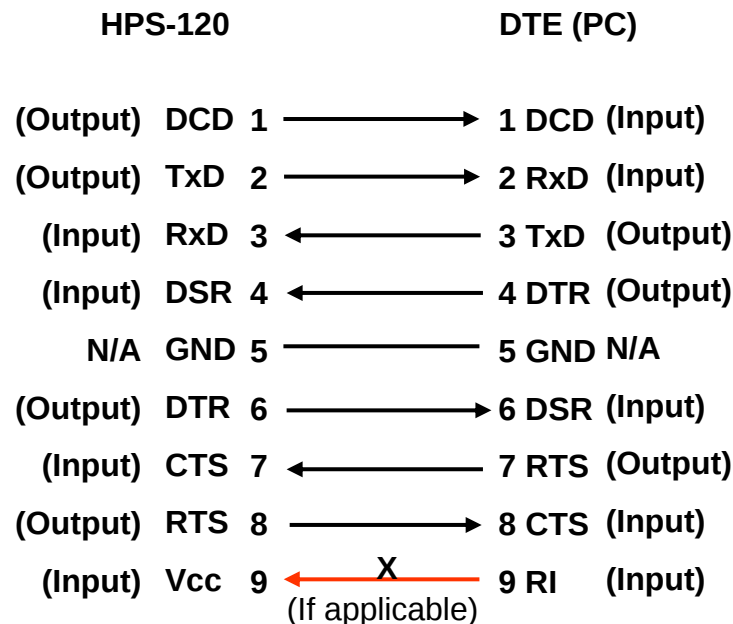

Remarks

1. X - Not Connected
2. If the DCE (modem) and DTE (PC) are using either hardware flow control or DTR/DSR, you shall set the flow control for both of HPS-120 to DTR/DSR.
3. If the DCE (modem) and DTE (PC) are not using hardware flow control and DTR/DSR, you shall set the flow control for both of HPS-120 to None. In this case, you may connect just pin # 2, 3 and 5.
4. The HPS-120 doesn't support an RI signal. You can supply power using a pin # 9 for the HPS-120.